



What is this?

- This Help Guide refers to the ECD Wireless Setup Software

How do I completely remove the Wireless Setup Software from my PC?

1. Uninstall the Wireless Setup Software ..

Windows XP/Vista : use **Control Panel | Add or Remove Programs**

Window 7 : use **Control Panel | Programs**

Windows 8 & 10 : search **Programs and Features**.

Locate the Wireless Setup Software in the list and select Remove or Uninstall.

2. Completely remove the folder **Program Files\Wireless Setup**.
This might be **Program Files (x86)\Wireless Setup** on some operating systems.
3. Completely remove the folder **My Documents\Wireless Setup**.
This might be **Documents\Wireless Setup** on some operating systems.
4. Delete the file **My Documents\config.wft**.
This might be **Documents\config.wft** on some operating systems.

The software and any related data is completely removed.