

Help Guide 2c

How do I allow the FilesThruTheAir™ WiFi Sensor Software to communicate through my ZoneAlarm firewall?



What is this?

ZONEALARM

- This Help Guide refers to the FilesThruTheAir™ WiFi Sensor Software.
- These instructions are for the ZoneAlarm Pro Antivirus and Firewall software, although they may equally apply to other ZoneAlarm products.

How do I allow the FilesThruTheAir™ WiFi Sensor Software to communicate through my PC firewall?

Open ZoneAlarm Pro Antivirus and Firewall

1. In the Firewall tab, click **Settings** for the **Application Control** category.
2. Click **View Programs**.
3. Click **Add**.
4. Select **WiFi Sensor Software**.
5. Click **Open**.

How do I open the ports required by the FilesThruTheAir™ WiFi Sensor Software?

Open ZoneAlarm Pro Antivirus and Firewall

1. Select **Firewall**.
2. In either the Trusted Zone or Public Zone area, click **Custom**. The Firewall settings dialog appears.
3. Scroll to the security level (High or Medium) to which you want to add ports.
4. Select the desired port type: incoming **UDP**, outgoing **UDP**, incoming **TCP**, or outgoing **TCP**.
5. You will need to unblock **TCP** port **10080** and **UDP** ports **1024** and **8010**
6. Click **Apply**, then click **OK**.